

Cell Voice Dialer Model # CVD-2000 Remote Security System Instructions

What's Inside:

- AD2000 Automatic Voice Dialer*
- Cell-Mate Interface module with Antenna*
- MC-2a power charger*
- Metal Cabinet*
- Phone Cord to connect Auto-Dialer to Cell-Mate*

What you need to provide:

Cellular phone not included. The Cell Adapter that comes with the unit is compatible with a specific Motorola cell phone. These include: V120, V60 (all V60 variants except V60p and V60v), T720, T721, T722i, T730, T731, V300, V330, V400, V500, V505, V525, V535, V540, V547, V550, V551, V555, V557, V600, V635. Also, V60s if battery cover is removed.

Installation of Cell phone:

-At the back of the phone below the antenna there is a rubber cap protecting the cell phone antenna connector. Remove the cap before placing the cell phone into the Cell-mate.

-Fully seat the cell phone onto the row of contacts in the Cell-mate, and gently lean the phone back to engage the antenna connector.

-While your cell phone is placed in the Cell-mate, your cell phone's internal antenna is automatically bypassed and you must connect the external antenna for your phone to operate normally. Once removed from the Cell-mate, the cell phone's internal antenna is again functional.

-Follow instructions in the manual for installing and programming the Auto voice Dialer.

-With AC transformer connected, the mini controller will provide a regulated output to the power the cellmate and dialer as well as recharging a battery (a 12v rechargeable gel-type battery, not included).

-The telephone cord is pre-connected from the back of the Cell-mate to the top of the Auto Voice Dialer (Tel-in).

-Apply power to the cell phone and allow time to acquire the network. The red LED on the front of the Cell-mate should remain continuously on.

Important:

- 1. In programming of the phone numbers, and for the auto voice dialer to dial out, the last digit must be the # sign. For example, 18002271592#. To leave a message, include three pauses in programming after the # sign.**
- 2. In programming for a pager, rather than program “for a pager”, program for a regular phone number. Then after inputting the pager number and the # sign insert 5 pauses followed by the return call number and the # sign.**

Technical Information:

1. Power transformer: Input 120VAC 60 Hz. Output 16.5 VAC, 40 VA.
2. Complies with limits for Class B digital device as outlined in Part 15 of the FCC rules.
3. MC-2a 12VDC regulated Output at 1 amp continuous, 2 AMP surge.
4. This Class B digital apparatus meets all regulations of the Canadian Interference-Causing Equipment Regulations.
5. Operates at +32F to +104F/ OC to +40C.
6. Peal pulse 400mA, Standby 100-175mA.

If the red LED is	Which means	You should
Off	No Power	Plug adapter into Unit
Slow Blinking	Power is OK, but No cell phone connected.	Turn on the cell phone and insert in the Cell-mate.
Rapid Blinking	The Cell-Mate is Starting to communicate with the cell phone.	Wait for several seconds
Solid	Cell phone connection Is secure.	Make or receive calls.